

END USER INSTRUCTIONS


Transmitter: T28-07

safe

smart

strong

Product brand name:
SUPRATEQ TW78

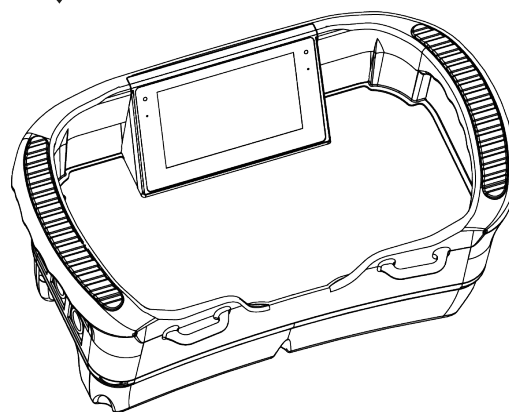

©Tele-Radio i Lysekil AB

Datavägen 21

SE-436 32 Askim

Sweden

Phone: +46 (0)31 748 54 60, Email: info@tele-radio.com

CHAPTER 1: INTRODUCTION	5
1.1 About this document	7
1.2 About T28 transmitters	8
CHAPTER 2: SAFETY	10
2.1 Warnings & restrictions	10
2.2 Safety features	13
CHAPTER 3: TECHNICAL DATA	14
3.1 System specifications	14
3.2 Transmitter specifications	14
CHAPTER 4: PRODUCT GENERAL DESCRIPTION	16
4.1 Overview	16
4.2 Transmitter dimensions	16
4.3 Transmitter top view	17
4.4 Transmitter bottom view	18
4.5 Transmitter side views	19
4.6 Display and display LEDS	20
4.7 Side buttons	21
CHAPTER 5: STATUS AND ERROR INDICATIONS	22
5.1 Display LEDs status and error codes	22
5.2 Error indications and messages	22
CHAPTER 6: OPERATION	23
6.1 General information	23
6.2 General navigation	23
6.3 Start-up protection	24
6.4 Functionality test	25
6.5 Log the transmitter in to a receiver	26
6.6 Start a session	27
6.7 Log the transmitter out from a receiver	29
6.8 Switch the transmitter off	29
CHAPTER 7: CONFIGURATION MENU	30
7.1 Menu mode and standard settings	30
7.2 Enter Menu mode (no PIN code required)	31
7.3 Enter Menu mode (PIN code required)	32
7.4 Register a transmitter in a receiver	33

7.5 Clear blocked inputs36

CHAPTER 8: BATTERY37

8.1 Battery precautions37

8.2 Battery information39

CHAPTER 9: WARRANTY, SERVICE, REPAIRS, AND MAINTENANCE41

CHAPTER 10: REGULATORY INFORMATION42

10.1 Europe42

10.2 North America43

ANNEX A: INDEX45

CHAPTER 1: INTRODUCTION

Thank you for using a Tele Radio product



READ ALL INSTRUCTIONS AND WARNINGS CAREFULLY BEFORE OPERATING THE PRODUCTS.

These End user instructions have been published by Tele Radio and are not subject to any guarantees. The End user instructions may be withdrawn or revised by Tele Radio at any time and without further notice. Corrections and updates will be added to the latest version of the manual. Always download the End user instructions from our website, www.tele-radio.com, for the latest available version. Keep the safety instructions for future reference.

IMPORTANT! These instructions are intended for end users. The instructions can be printed and handed to end user.

Tele Radio remote controls are often built into wider applications. This documentation is not intended to replace the determination of suitability or reliability of the product for specific user applications and should not be used for this purpose. It is the responsibility of any such users or integrators to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use. Tele Radio shall not be responsible or liable for misuse of the information contained herein.

Always refer to the applicable local regulations for installation and safety requirements relating to cranes, hoists, material handling applications, lifting equipment, industrial machinery, and/or mobile hydraulic applications using Tele Radio products, e.g.:

- applicable local and industrial standards and requirements,
- applicable occupational health and safety regulations,
- applicable safety rules and procedures for the factory where the equipment is being used,
- user and safety manuals or instructions of the manufacturer of the equipment where Tele Radio remote control systems are installed.

Tele Radio End user instructions do not include or address the specific instructions and safety warnings of the end product manufacturer.

For battery precautions, see "8.1 Battery precautions".

Tele Radio products are covered by a warranty against material, construction, or manufacturing faults. See "Chapter 9: Warranty, service, repairs, and maintenance".

1.1 About this document

Before installing or operating the product, read the corresponding documentation carefully.

Tele Radio's product range is composed of transmitters, receivers, and accessories intended for use together as a system.

T28 systems are mainly intended for the hydraulic and mobile equipment markets. These systems are not standardized but customized and adapted to each customer's needs. How the outputs are connected to control the object depends on each specific installation and will not be covered in this document. For exact details, see the technical documentation provided for your specific system. Drawings, schematics and connection diagrams are unique and are also provided together with the system. Images shown in this document may therefore not show the exact position of buttons, paddles and are for illustrative purposes only.

These End user instructions cover general safety issues, main technical specifications, standard operating instructions and battery information. Images shown in this document are for illustrative purposes only.

Please report any error or omission in this document, as well as any improvement or amendment suggestion to td@tele-radio.com.

1.1.1 COPYRIGHT

Information in this document is subject to change without notice. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, photographic, mechanical (including photocopying), recording or otherwise for any purpose other than the purchaser's personal use without the written permission of Tele Radio.

1.1.2 TERM AND SYMBOL DEFINITIONS

The capitalized terms and symbol used herein shall have the following meaning:

- **WARNING:** indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION:** indicates a hazardous situation which, if not avoided, will result in minor or moderate injury.
- **IMPORTANT:** is used for information that requires special consideration.
- **NOTE:** is used to address practices not related to physical injury.



This symbol is used to call attention to safety messages that would be assigned the signal words "WARNING" or "CAUTION".

1.2 About T28 transmitters

NOTE: Base models are meant to be customized according to customer or application requirements.

T28 transmitters have duplex communication and work in continuous mode.

There is one base model available.

Model	Blank front	Stop button on the side	Key switch	LEDs in handlebar	RFID	Cable control	Vibration motor
T28-07	●	○	○	●	○	○	●

- Standard ○ Optional¹

¹Must be purchased separately.

1.2.1 ERGONOMICS



Tele Radio transmitters are intended to be used together with a Tele Radio waist belt or neck strap, for better support and improved ergonomics while operating the transmitter.

Adjust the belt around the waist, then hook the transmitter into the waist belt straps.

Fig. 1 Working position with a Tele Radio transmitter while using the Tele Radio waist belt

NOTE: Always hold the transmitter with the control panel towards you. You must be able to read any text on the control panel and understand the symbols on it.

CHAPTER 2: SAFETY

2.1 Warnings & restrictions



Carefully read through the following safety instructions before proceeding with the installation, configuration, operation, or maintenance of the product. Failure to follow these warnings could result in death or serious injury.

This product must not be operated without having read and understood the End user instructions, the specific technical documentation (for customized systems), and having received the appropriate training. The purchaser of this product has been instructed how to handle the system safely. The following information is intended for use as a complement to applicable local regulations and standards.

IMPORTANT! Tele Radio remote controls are often built into wider applications.

These systems should be equipped with:

- a wired emergency stop where necessary
- a brake
- an audible or visual warning signal

2.1.1 OPERATION



This radio system must not be used in areas where there is a risk of explosion.



This equipment is not suitable for use in locations where children are likely to be present.



Only qualified personnel should be permitted to access the transmitter and operate the equipment.



- Always follow operating and maintenance instructions as well as all applicable safety procedures and requirements.
- Do not open the receiver encapsulation unless you are qualified.
- You must satisfy the age requirements in your country for operating the equipment.
- It is strictly prohibited to operate the equipment under the influence of drugs, alcohol and/or medications.
- Always test the transmitter stop button before operating it. Press the stop button then twist and pull it out. This test should be done on each shift.
- Never use a transmitter if the stop button is mechanically damaged. Contact your supervisor or representative for service immediately.
- Never leave the transmitter unattended.
- Always switch the transmitter off when not in use. Store in a safe place.
- Keep a clear view of the work area at all times.

2.1.2 MAINTENANCE



Before maintenance intervention on any remote controlled equipments:


- always remove all electrical power from the equipment.
- always follow lockout procedures.

- Keep the Safety information for future reference. Always download the End user instructions from our website, www.tele-radio.com, for the latest available version.
- If error messages are shown, it is very important to find out what caused them. Contact your representative for help.
- The functionality of the stop button should be tested at least after every 200 hours' use (see "2.2.1 Stop button").
- If the stop button is mechanically damaged, do not use the transmitter. Contact your supervisor or representative for service immediately.
- Keep the product in a clean, dry place.
- Do not try to open the encapsulation.

- Always contact your representative for service and maintenance work on the product.
- Keep contacts and antennas clean.
- Wipe off dust using a clean, slightly damp cloth.
- Never use cleaning solutions.
- Check the encapsulation, foils and cable for damages every day. If you use the product although the encapsulation or foil is damaged, moisture can cause serious damage to the electronics.

2.2 Safety features

2.2.1 STOP BUTTON

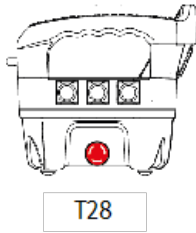

When the **Stop** button is pressed, the stop relays on the receiver deactivate, unless otherwise stated in the corresponding technical documentation provided with each customized system.

Fig. 1 Example of possible locations for the stop button. Here on the right side of a T28 transmitter.

IMPORTANT! The Stop button should always be tested before operating the transmitter. This test should be done on each shift.

To test the stop button:

1. Press the **Stop** button.
2. Twist and release the **Stop** button.

CHAPTER 3: TECHNICAL DATA

NOTE: The information below may differ in customized systems, please refer to the corresponding technical documentation provided with each system.

3.1 System specifications

Radio frequency band	2405 – 2480 MHz
Frequency management	Direct Sequence Spread Spectrum (DSSS) Field Strength Adaptation Feature
Number of Channels	16 (channel 11 – 26)
Range (typical)	100 m (328 ft), adjustable depending on configuration
System address	32 bit – 4 294 967 295 possibilities
Data format	250 kbit/s
Hamming distance	6
Pairing (registration)	Easy to pair without tools and without opening the receiver housing.
Configuration	Display menu

3.2 Transmitter specifications

3.2.1 COMMON SPECIFICATIONS

	T28
Power supply	Two (2), replaceable, rechargeable lithium-ion batteries
Battery pack	3.7 V / 1600 mAh Li-ion – 2 battery compartments Hot swappable
Current consumption	From 145 mA (depending on the configuration)
Operating time	Up to 10 h with one battery (depending on the configuration)
Radio frequency output power	EIRP ¹ < 12.5 dBm (18 mW)
Antenna	Internal (external as an option)
Functions	Up to 40 analog functions Up to 144 (8 x 18) digital functions

¹Equivalent isotropic radiated power

	T28
Display	LCD 4.3" TFT. Active area 95 x 53.8 mm (3.74 x 2.12 in) Resolution: 480 x 272 px Graphic / pixels with backlight sensor Standard and custom configurations
Safety levels	EN IEC 61508 SIL 3, EN ISO 13849-1, PLe CAT3 (Stop function).
IP code	IP65
Operating temperature	-20...+55 °C / -4...+130 °F
Storage temperature	-30...+70 °C / -22...+158 °F (without battery) ¹
Charging temperature	+10...+35 °C / +50...+95 °F
Weight (typical)	~2 kg (~4.4 lbs)

3.2.2 OTHER SPECIFICATIONS

	T28-07
Number of joysticks	○
Number of paddles	○
Number of switches	○
Stop button	No predefined position
Key switch	○
LEDs in handlebar	●
RFID	○
Vibration motor for Haptic feedback	●
Built-in drop and tilt protection	●
Cable backup	○
Weight (typical)	~2 kg (~4.4 lbs)

● Standard ○ Optional² – : Not available


¹For storage temperature of battery pack M245060 (D4-02), see "8.2 Battery information".

²Must be purchased separately.

CHAPTER 4: PRODUCT GENERAL DESCRIPTION


NOTE: The pictures shown in this chapter are for illustrative purposes only. Depending on the configuration, the actual product appearance may differ from the basic model used for reference.

4.1 Overview

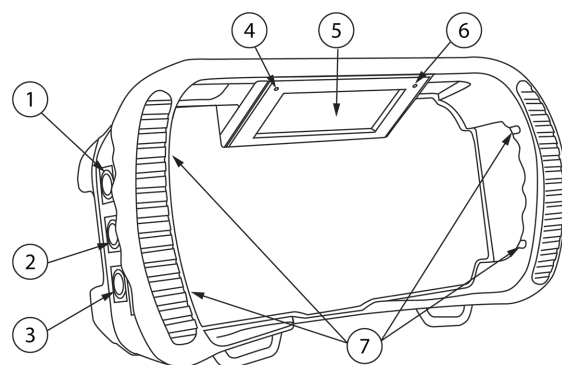


- | | |
|----------------------------|-------------------|
| 1. side button SB1 | 5. LCD display |
| 2. side button SBX1 | 6. Battery LED 2 |
| 3. side button SB2 | 7. Handlebar LEDs |
| 4. Battery LED 1 | |

4.2 Transmitter dimensions

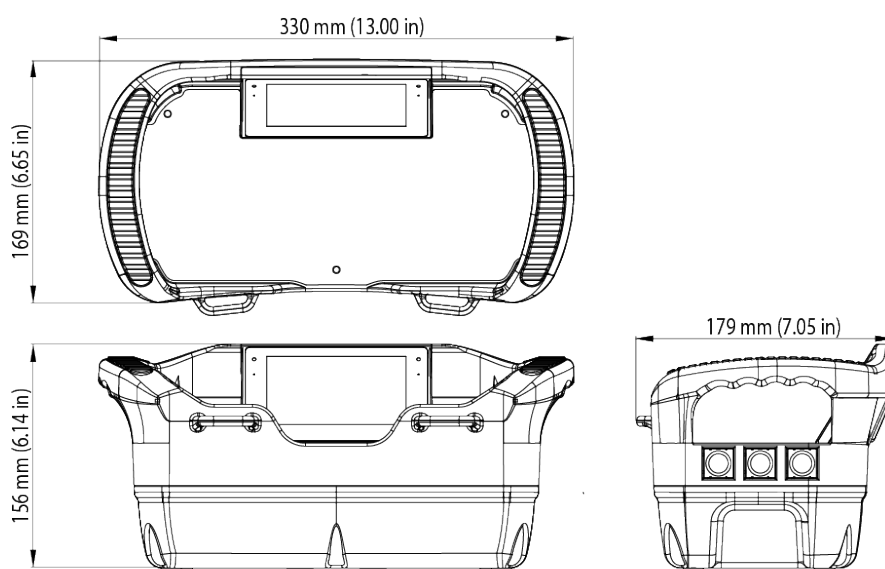

4.3 Transmitter top view

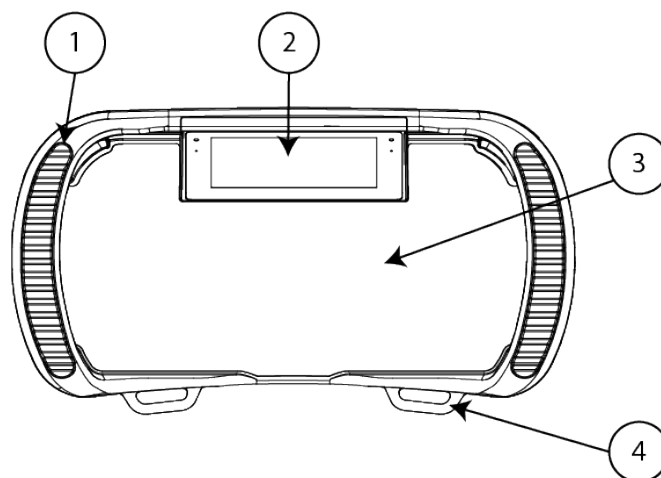

1. Handlebar


2. LCD display

3. Customizable area¹

4. Belt loops


¹Paddles, joysticks, buttons, etc. depending on the configuration.

4.4 Transmitter bottom view

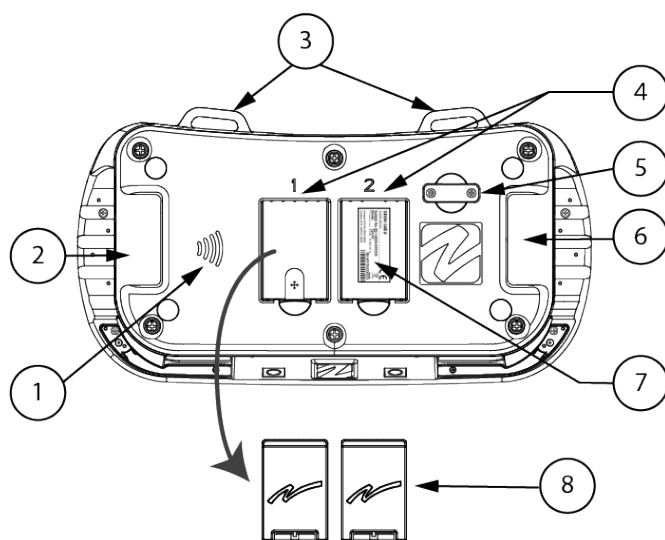

- | | |
|--|---|
| 1. RFID antenna (configurable option) | 5. Memory card socket (not implemented) |
| 2. Customizable area (e.g. for a key switch) | 6. Customizable area (e.g. for the stop button) |
| 3. Belt loops | 7. Product label |
| 4. Battery compartments 1 and 2 | 8. Replaceable batteries |


4.5 Transmitter side views

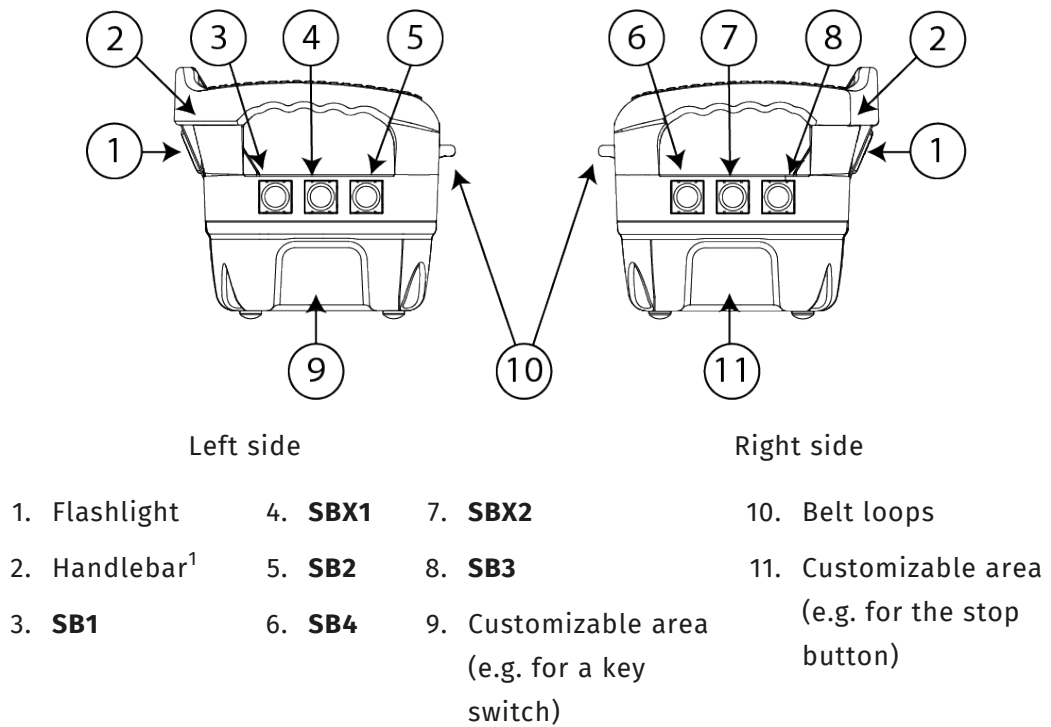

¹T28-07: With integrated LEDs.

4.6 Display and display LEDs

The transmitter display is intended for receiving and visualizing feedback information from the system as well as for basic configuration. The T28 transmitter display is controlled by the transmitter's side buttons.

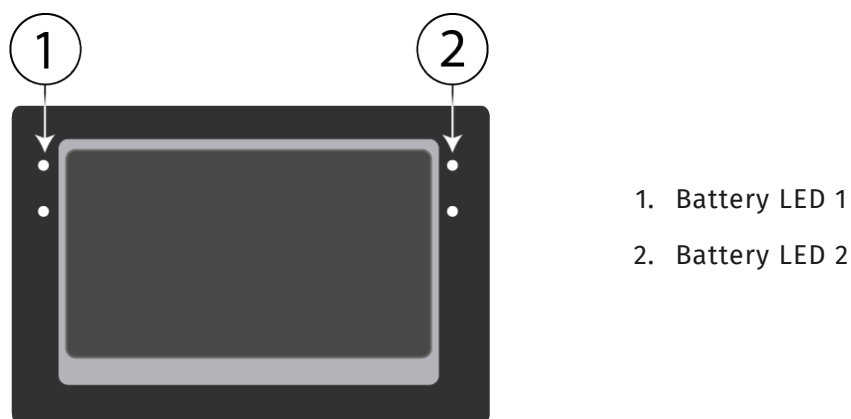

4.6.1 DISPLAY LEDs

The transmitter display has two bi-color LEDs for status indication:

- Battery LEDs 1–2 are for battery 1 and battery 2 indications respectively. Green means that the battery level is good while red indicates that the battery level is low. When the battery LED turns red, the battery should be changed / recharged at the next convenient opportunity.

For more information about status and error indications, see "Chapter 5: Status and error indications"

4.6.2 MESSAGE TYPES ON THE DISPLAY

Error /Fail messages

"Error"/"Fail" messages are shown on a red background and indicate a fatal error.

"Error"/"Fail" messages are displayed until the transmitter is turned off (after expiration of the inactivity period or manual stop by the user).

Success messages

"Success" messages are shown on a green background and indicate that an operation has succeeded. "Success" messages are displayed until the transmitter is turned off (after expiration of the inactivity period or manual stop by the user).

Warning messages


"Warning" messages are shown on a yellow background and indicate a warning message that will vanish after a short moment.

Information messages

"Information" messages are shown on a white background and give information about an ongoing operation, e.g. when you log in, etc.

4.7 Side buttons

The side buttons have different functions depending on the mode the transmitter is in.

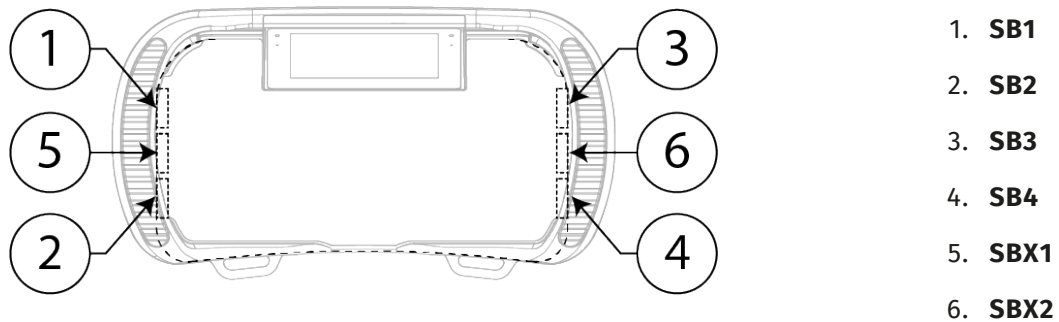

Side button...	Default function in...			
	pre-session	session	menu mode	calibration mode
SB1	Enter calibration mode	–	Select	Swap directions
SBX1	Flashlight	Flashlight	Flashlight	Flashlight
SB2	Handlebar light	Handlebar light	Handlebar light/ Back	Handlebar light
SB3	Start / Menu mode	–	Up	Calibration positive
SB4	Start	Quick logout	Down	Calibration negative

CHAPTER 5: STATUS AND ERROR INDICATIONS

5.1 Display LEDs status and error codes

LED	Colour	Off	On	Flash	Indicates
Battery LED 1	green		●		Battery 1 level is good.
	red		●		Battery 1 level is low, must be charged.
	red			●	Battery 1 is charging and is not yet fully charged.
	–	○			No battery present in battery compartment 1 .
Battery LED 2	green		●		Battery 2 level is good.
	red		●		Battery 2 level is low, must be charged.
	red			●	Battery 2 is charging and is not yet fully charged.
	–	○			No battery present in battery compartment 2.

5.2 Error indications and messages

Please write down or take a picture of the error message shown on the display and contact your representative for assistance.

CHAPTER 6: OPERATION

6.1 General information


To control a receiver, the transmitter must be registered and logged in to the receiver. If another transmitter is already logged in to the receiver, it must be logged out before a different transmitter can be logged in.

If no transmitter is logged in to the receiver, proceed with the login procedure before using the system. Once a transmitter has been logged in, it will remain logged in until it is manually logged out.

More than one transmitter can be registered in the receiver, but only one transmitter can be logged in at a time.

6.2 General navigation

The Menu system is controlled by side buttons **SB1–4**.

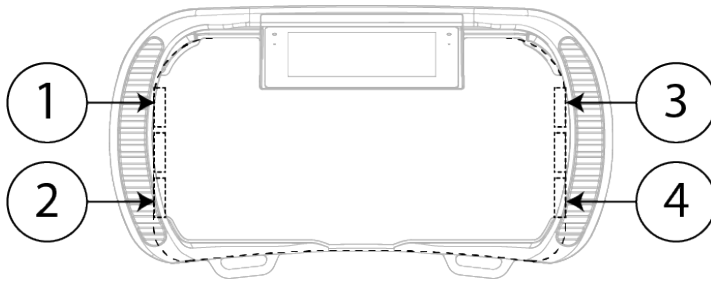

1. **Select** button (**SB1**)
2. **Back** button (**SB2**)
3. **Up** button (**SB3**)
4. **Down** button (**SB4**)

6.2.1 MAIN MENU

Side button	Action
SB1 (Select)	Enter the selected menu
SB2 (Back)	Back / cancel
SB3 and SB4 (Up/Down)	Move between the menu items

6.2.2 ENTER NUMBERS/ CHANGE VALUES

Side button	Action
SB1 (Select)	Accept the updated value
SB2 (Back)	Cancel and go back to the menu without confirmation
SB3 and SB4 (Up/Down)	Increase/decrease the value displayed

6.2.3 SELECT A LOCATION

Side button	Action
SB1 (Select)	Select/deselect the current location. Selected elements are indicated by a + sign on the left of the selection.
SB2 (Back)	Accept currently selected slots
SB3 and SB4 (Up/Down)	Move through the location list.

6.3 Start-up protection

RFID tags can be activated to prevent unauthorized personnel from operating the transmitter. To activate the RFID functions, contact your representative for assistance.

Once the RFID start-up protection functions have been activated, RFID tags need to be registered in the transmitter before they can be used.

If the RFID start-up protection functions have been activated but no RFID tag has been registered, this will be indicated on the display with the following warning message: [There are no RFID stored in the settings. Register tags in the config menu.]

Once RFID tags have been registered, the display will show: [Waiting for a valid tag to be presented...] each time the transmitter is started.

6.4 Functionality test

NOTE: This list is intended for use as a support for the manufacturer of the equipment where Tele Radio remote control systems are installed.

Before operating the radio system, follow the procedure below.

IMPORTANT! This test should be performed at each shift, without a load, and should include but not be limited to the following steps

- Make sure that the controlled object can not cause any harm in the event of unexpected movement.
- Always follow local safety rules and start the equipment according to the corresponding instructions.
- Make sure that the transmitter can control the receiver by testing all functions.
- Make sure that the functions respond as expected.
- Make sure that all movements are as planned.
- Make sure that the stop button works correctly.
- Make sure that the stop function works correctly.

6.5 Log the transmitter in to a receiver

1. Make sure that the **Stop** button is pressed.

2. Twist and release the **Stop** button.

The initial start-up logo is displayed. Battery indicator(s) light(s).

The display shows: [Session Selection]

NOTE: Should the display show a warning message on zero position for the control switch or joystick, release the affected controls in order to proceed. If the controls are not released, the transmitter will block the corresponding inputs and display the following warning message: [Inputs have been blocked. IO board 0X: 0XXXXXXXXX]. Enter the **Menu mode** and clear the locked inputs before proceeding with the login procedure (see "7.5 Clear blocked inputs").

3. Press the **Select** button to select one or more receiver(s) for the session.

The display shows: [Select one or more items] and the list of the registered receivers. Selected receivers are marked with a + sign.

Select/change one or more receiver(s) Keep selected receiver(s)

4. Choose a receiver in the list using the **Up/Down** buttons.

4. Press the **Back** button.

The display returns to the start

5. Press the **Select** button to select.
A + sign is displayed in front of the selected receiver.

screen: [PUSH START BUTTONS]

5. Proceed to step 8.

6. Repeat steps 4–5 if necessary.

7. Press the **Back** button to accept.

The display returns to the start

screen: [PUSH START BUTTONS]

8. Press both **Start** buttons to start the session.

The buzzer emits a beep. The display shows: [Logging in...].

9. Press the **Stop** button to exit the session.

The display shows: [Ending session...]

The login settings are now stored/saved in the transmitter.

6.6 Start a session

To be able to control a receiver using the transmitter, the transmitter must be registered and logged in to a receiver.



When not in use, transmitters must be switched off and stored in a secure storage space.



Do not use the system if the stop button is damaged or if it does not stop the equipment. Doing so could result in serious injury or death.

NOTE: If the transmitter has never been logged in to the receiver before, the start-up procedure will fail and the transmitter will turn off.

Start the transmitter again and log in to a receiver before proceeding with the start-up procedure (see "6.5 Log the transmitter in to a receiver").

NOTE: The last accessed receiver(s) will automatically be selected the next time the transmitter is started.

1. Make sure that all safety measures have been followed.
2. Make sure the transmitter battery is charged.
3. Make sure that the **Stop** button is pressed.
4. Twist and release the **Stop** button.

The initial start-up logo is displayed. Battery indicator(s) light(s). The display shows: [PUSH START BUTTONS]

NOTE: If the display shows a warning message on zero position for the control switch or joystick, release the affected controls in order to proceed. If the controls are not released, the transmitter will block the corresponding outputs and display the following warning message: [Inputs have been blocked. IO board 0X: 0XXXXXXXXX].

To clear the locked inputs before proceeding with the start-up procedure see "7.5 Clear blocked inputs".

5. Press the **Select** button to check if there are receiver(s) selected for the session.

The display shows: [Select one or more items] and the list of registered receivers. Selected receivers are marked with a + sign.

If the correct receiver is already selected

- Press the **Back** button.

The display shows: [Session Selection]

- Proceed to step 10.

To select/change receiver(s):

- Proceed to next step.

6. Choose the receiver(s) to operate using the **Up/Down** buttons.
7. Press the **Select** button to select.
A + sign is displayed in front of the selected receiver.
8. Repeat step(s) 6–7 if necessary.
9. Press the **Back** button to accept.
The display shows: [Session Selection]
10. Press and hold both **Start** buttons simultaneously for one second.
The buzzer emits a beep.
11. Release both **Start** buttons.
The Status LED flashes rapidly while waiting for the receiver confirmation.
 - **If the transmitter has already been logged in to the receiver:**
*The display shows: [Logging in...]
The transmitter logs in to the receiver in which it has been registered in. The Status LED lights green.*
 - **If the transmitter has not been logged in to the receiver:**
*The display shows: [Login failed. No receivers selected for session.] The transmitter turns off.
Start the transmitter again and log in to a receiver before proceeding with the start-up procedure ("6.5 Log the transmitter in to a receiver").*

NOTE: If the paired receiver is not detected within 30 s, the login process is canceled. *The display shows: [Login failed. Timeout. Receiver HY-RX-xxxx] and the transmitter turns off.*

12. Proceed with the functional test (see "6.4 Functionality test").

6.7 Log the transmitter out from a receiver

A transmitter already logged in to the receiver has to be logged out before any other transmitter can be logged in.

NOTE: Logout can only be performed when the transmitter is on and a radio link with one or more receivers has been established. The receiver must be powered-up for the logout procedure to be successful.

NOTE: The logout procedure will log the transmitter out from all receivers that are part of the radio session.

1. Press and hold side button **SB4**.

2. Press the **Stop** button.

The display shows: [Logging out...] and [Logout successful]

3. Release side button **SB4**.

The transmitter turns off.

6.8 Switch the transmitter off

When the transmitter is active and the stop button is pressed, all relays on the receiver deactivate.

NOTE: When the transmitter is switched off, it remains logged in to the receiver(s). To log out, see "6.7 Log the transmitter out from a receiver"

1. Press the **Stop** button.

The display shows: [End session successful]

The transmitter turns off. All relays on the receiver deactivate.

CHAPTER 7: CONFIGURATION MENU

7.1 Menu mode and standard settings

The **Menu mode** allows for certain settings to be set directly from the transmitter. Once in **Menu mode**, the following menus will be available.

Menu	Description
- [Register]	Select a location to register a new receiver in. Radio communication is immediately enabled when the registration is confirmed.
- [Erase]	Select a registered receiver to be erased from the transmitter.
- [Replace]	Select a registered receiver to be replaced.
- [Clear blocked input]	Reset any blocked input.
- [Radio Channel]	Select the channel/bank to use.
- [Backlight Intensity]	Set the display luminosity (in %).
- [Buzzer Volume]	Set the buzzer volume level (in %).
- [Radio Inactivity Timeout]	Set the off delay (in minutes) before the transmitter automatically turns off.
- [Time Zone]	Select the time zone (UTC +/- 14 h).
- [Startup protection - RFID Learn]	Register one or more RFID tags in the transmitter for start up protection.
- [Startup protection - RFID Erase]	Erase one or more registered RFID tag from the transmitter.
- [Repeater Configuration]	Set the position number of a repeater (slot ID) when used in a chain of repeaters.
- [Show device information]	Display the unit's serial number and a list of the software versions currently installed on the transmitter.
- [Show BLOB info]	Display BLOB ("binary large object") information.
- [Start RFID Test]	For testing the registered RFID tags.

For more information about menu navigation, see "6.2 General navigation".

7.1.1 MENU MODE PROTECTION

PIN codes can be activated to prevent unauthorized personnel from entering the **Menu mode**. To activate the PIN code functions, contact your representative for assistance. All PIN code settings require assistance.

Menu mode can be protected by PIN codes with different access levels (ex: standard and admin). Once the protection functions have been activated, a PIN code will always be required for accessing the **Menu mode**.

7.2 Enter Menu mode (no PIN code required)

1. Make sure that the **Stop** button is pressed.
2. Twist and release the **Stop** button.
The initial start-up logo is displayed. Battery indicator(s) light(s). The display shows: [Session Selection]
3. Press and hold side button **SB3**.
4. Press the **Stop** button.
5. Release **SB3**.
The display shows the menu list.
6. Select a menu by using side buttons **SB1–4** (see "6.2 General navigation").

7.3 Enter Menu mode (PIN code required)

1. Make sure that the **Stop** button is pressed.
2. Twist and release the **Stop** button.
The initial start-up logo is displayed. Battery indicator(s) light(s). The display shows: [Session Selection]
3. Press and hold side button **SB3**.
4. Press the **Stop** button.
5. Release **SB3**.
The display shows: [Config Menu PIN 0000]
6. Enter the first digit using the **Up/Down** buttons.

NOTE: Once the **Select** button has been pressed, it is not possible to move back to the previous digit. Pressing the **Back** button will abort the procedure.

7. Press the **Select** button to accept and move to the next digit.
8. Repeat steps 6–7 until all four digits have been entered.
9. Press the **Back** button to accept.
 - **If the entered PIN code is correct:**
The display returns to the menu list.
 - **If the entered PIN code is incorrect:**
The display shows: [Config Menu PIN Incorrect PIN entered, shutting down device]. The transmitter turns off.
Go back to step 1 and try again.

7.4 Register a transmitter in a receiver

Registering means establishing communication between the transmitter and the receiver.

T28 transmitters can have up to 32 registered receivers (locations 1–32).

NOTE: The registration instructions require access to the receiver housing. For the registration procedure to be successful, the receiver must be powered up.



RISK OF UNINTENDED EQUIPMENT OPERATION

Only transmitters that are intended for use should be registered in the receiver.


Failure to follow these instructions could result in death, serious injury, or equipment damage.



RISK OF UNINTENDED EQUIPMENT OPERATION

Do not perform this action when the receiver is in a session with another transmitter. The radio communication may be interrupted or broken.

Failure to follow these instructions could result in death, serious injury, or equipment damage.

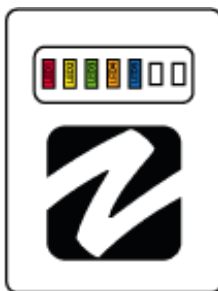On the Receiver

1. Power the receiver up.
LED 1 is flashing (red).
2. Press and hold the **Cap sensor** button until LED1 stops flashing.
LEDs 2–5 flash (fast).
3. Release the **Cap sensor** button.
LEDs 1–5 flash (slow).
The receiver is now in registration mode.
If no register command is received within 30 seconds, the receiver will exit registration mode.¹

On the Transmitter

4. Make sure that the **Stop** button is pressed.
5. Twist and release the **Stop** button.
The initial start-up logo is displayed. Battery indicator(s) light (s). The display shows: [Session Selection].
6. Enter **Menu mode** (see "7.2 Enter Menu mode (no PIN code required)").
7. Navigate to the [Register] menu using the **Up/Down** buttons.
8. Press the **Select** button to enter.
9. Choose a location for the receiver to be registered in using the **Up/Down** buttons.
10. Press the **Select** button to select.
A + sign is displayed in front of the selected location.
11. Press the **Back** button to accept.
The display shows: [Registration in progress...]

When the transmitter's register command is received, ...

On the Receiver

LEDs 1–5 flash (fast).

On the Transmitter

The display shows: [Confirm registration on the receiver].

The display shows: [Registration successful. Transmitter was registered in HY-RX-xxxxx].

The transmitter is now registered.

¹It is also possible to exit registration mode by briefly touching the receiver's cap sensor button.

On the Receiver

LED 1 is flashing (slow).

On the Transmitter

The transmitter turns off.

If not successfully completed:

On the Receiver

The receiver exits registration mode.
LED 1 is flashing (red).

On the Transmitter

The display shows: [Registration
failed Timeout]. The transmitter turns
off.

Go back and proceed from step 2.

7.5 Clear blocked inputs

On start up, the T28 transmitters perform a zero position check for control switches, joysticks and/or paddles.

If the transmitter detects that some control commands are not in the zero position, the following warning message is displayed:

```
[One or more inputs are not  
in the zero/startup  
position]  
[Release all controls to  
proceed.]
```

If the affected controls are not released, the transmitter will block the corresponding inputs and display the error message:

```
[Zero position problem  
identification in progress.]  
[Please wait for device to  
automatically restart]
```

The next time the transmitter is started, the display will show the warning message:

```
[Inputs have been blocked.]  
[IO board 0X: 0XXXXXXXXX].
```

To clear the locked inputs:

1. Make sure that the **Stop** button is pressed.
2. Twist and release the **Stop** button.
The initial start-up logo is displayed. Battery indicator(s) light(s). The display shows: [Session Selection]
3. Press and hold side button **SB3**.
4. Press the **Stop** button.
5. Release **SB3**.
The display shows the menu list.
6. Navigate to the [Clear blocked input] menu using the **Up/Down** buttons.
7. Press the **Select** button to enter.
The display shows: [Value: False]
8. Press the **Up** or **Down** button to change [False] to [True].
9. Press the **Select** button to confirm.
The display returns to the menu list.
 - **If successfully completed, at next start-up:**
The display shows: [Session Selection]
 - **If not successfully completed, at next start up:**
The display shows: [Inputs have been blocked.]
[IO board 0X: 0XXXXXXXXX].
Go back to step 1 and try again.

CHAPTER 8: BATTERY

8.1 Battery precautions

Carefully read the following safety instructions and warnings before using, charging or disposing of the batteries.



Batteries contain flammable substances such as lithium or other organic solvents, which may result in overheating, rupture or combustion.

Failure to read and follow the below instructions may result in fire, personal injury and damage to property if charged or used improperly.

8.1.1 HANDLING AND STORAGE



- **Risk of explosion if battery is replaced with a battery of an incorrect type.**
- **Do not short-circuit, disassemble, deform or heat batteries.**
- **Never attempt to charge a visibly damaged or frozen battery.**
- **Do not use or charge the battery if it appears to be leaking, deformed or damaged in any way.**
- **Do not solder directly onto batteries.**
- **Do not leave the battery in the charger once it is fully charged.**
- **Store in a cool location. Keep batteries away from direct sunlight, high temperature, and high humidity.**
- **Immediately discontinue use of the battery if, while using, charging, or storing the battery, the battery emits an unusual smell, feels hot, changes color, changes shape, or appears abnormal in any other way.**
- **Keep batteries out of reach of small children. Should a child swallow a battery, consult a physician immediately.**

8.1.2 DISPOSAL

When discarding batteries, insulate the + and - terminals of batteries with insulating/ masking tape.



- **Do not place multiple batteries in the same plastic bag.**
- **Do not incinerate or dispose of batteries in fire.**
- **Do not place used batteries in the household waste. Dispose of used batteries in accordance with the applicable regulations and legal requirements.**
- **Batteries that have been disposed of incorrectly may short circuit, causing them to become hot, burst or ignite.**

8.2 Battery information

NOTE: Only batteries approved by Tele Radio should be used in T28 transmitters.

T28 transmitters are equipped with two batteries to allow hot swap: one battery is used at a time, which allows to replace a low level battery during operation. The battery compartments are marked 1 and 2 and correspond to the two battery LED indicators on the transmitter's display (see "4.6.1 Display LEDs").

The batteries can be recharged using a Tele Radio battery charger or via cable control.

BATTERY PACK	
Article number	M245060 (D4-02)
Battery type	Replaceable, rechargeable lithium-ion battery
Weight (typical)	47 g (1.66 oz)
Voltage	3.7 V / 1600 mAh
Charging time	~ 4 h with an empty battery
Charging cycle	600 cycles
Charging temperature	+10...+35 °C / +50...+95 °F
Storage temperature	-20...+55 °C / -4...+130 °F

CHARGER¹	M769755 (D4-01)	M769780 (D4-06)
Description	Table/wall charger for battery M245060 (D4-02)	AC adapter to be used with M769755 (D4-01)
Input power / output power	5 V DC, 10 % (1A)	110–240 V AC / 5 V DC
Weight (typical)	0.12 kg (0.26 lbs)	–
Dimensions	90 x 25 x 135 mm (3.5 x 1 x 5.3 in)	–
Other	Can be wall-mounted	Supplied with multiple connector types

NOTE: M769755 (D4-01) must be purchased together with Tele Radio adapter M769780 (D4-06).

NOTE: Electronics and batteries must be physically separated before disposal. Make sure that electronics or batteries are not disposed of in household waste.

¹Purchased separately. For more information about battery charger M769755 (D4-01), see IM-ANC-DX103.

8.2.1 CHARGE THE BATTERY IN THE TABLE CHARGER

NOTE: When approximately 10 % of a battery capacity remains, the corresponding battery LED will light red.

1. Remove the battery from its compartment and place it in the Tele Radio battery charger.
2. The charger's LED lights red while the battery is charging.
3. The charger's LED turns green when the battery is fully charged.
4. Put the battery back into the transmitter's corresponding compartment.

8.2.2 CHARGING THE BATTERIES WITH CABLE CONTROL

NOTE: Cable control has two purposes:

- Replace radio communication when radio cannot or is not allowed to be used.
- Power and charge the transmitter if the batteries are low or removed.

NOTE: To get voltage to charge the batteries, cable control is normally connected to a receiver, but it is also possible to charge from another voltage source (10–24 V DC).

NOTE: The maximum length of the cable connecting the transmitter M12 connector to the receiver depends on the power supply and cable resistance. Test, with the transmitter powered without battery, to make sure there is at least 10 V at the transmitter M12 connector.

To be able to use cable control, the connector for cable control located on the transmitter bottom board (J6) must be connected to a M12 connector. The transmitter will charge the battery when there is voltage on pin 2 (V +) and 3 (GND) in the cable control connector. The range of the input voltage is then the same as the one on the receiver or the other voltage source.

When using cable control, charging always starts with the built-in battery (if any), otherwise it will start charging the battery with the lowest voltage. If both batteries are very low and charging is in progress, the battery LED 1 and 2 will flash red at the beginning of charging. After a moment, the charging process will determine which battery that should be charged first. The LED corresponding to the battery being charged will continue to flash (red) while the other battery LED will remain lit (red). If there is any charging error during charging, the corresponding battery LED will flash red /green alternatively (appears orange) with an interval ON=100 ms and OFF=900 ms.

CHAPTER 9: WARRANTY, SERVICE, REPAIRS, AND MAINTENANCE

Tele Radio products are covered by a warranty against material, construction and manufacturing faults. During the warranty period, Tele Radio may replace the product or faulty parts. Work under warranty must be performed by Tele Radio or by an authorized service center specified by Tele Radio.

The following are **not** covered by the warranty:

- Faults resulting from normal wear and tear
- Parts of a consumable nature
- Products that have been subject to unauthorized modifications
- Faults resulting from incorrect installation and use
- Damp and water damage

Maintenance

- Repairs and maintenance must be performed by qualified personnel
- Only use spare parts from Tele Radio
- Contact your representative for service or any other assistance
- Keep contacts and antennas clean
- Wipe off dust using a slightly damp, clean cloth

NOTE: Never use cleaning solutions or high-pressure washer.

CHAPTER 10: REGULATORY INFORMATION

10.1 Europe

Applies to: **T28-07**

10.1.1 CE MARKING



Hereby, Tele-Radio i Lysekil AB, declares that the product(s) listed above is/are in compliance with the Radio Equipment Directive 2014/53/EU.

The latest version of the complete EU Declaration of Conformity is available at the following website: www.tele-radio.com.

10.1.2 WEEE DIRECTIVE



This symbol means that inoperative electrical and electronic products must not be mixed with household waste. The European Union has implemented a collection and recycling system for which producers are responsible. For proper treatment, recovery and recycling, please take this product to a designated collection point.

Tele Radio strives to minimize the use of hazardous materials, promotes reuse and recycling, and reduces emissions to air, soil and water. When a commercially viable alternative is available, Tele Radio strives to restrict or eliminate substances and materials that pose an environmental, health or safety risk.

10.2 North America

Applies to: **T28-07**

10.2.1 FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To satisfy FCC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

10.2.2 IC STATEMENT

This product complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and

(2) This device must accept any interference, including interference that may cause undesired operation of device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) l'appareil ne doit pas produire de brouillage;
- 2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

To satisfy IC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operation at closer than this distance is not recommended.

Afin d'assurer la conformité aux exigences de la IC en matière d'exposition aux RF, une distance de séparation d'au moins 20 cm doit être maintenue entre l'antenne de cet appareil et toute personne à proximité pendant le fonctionnement de l'appareil. Pour assurer le respect de ces exigences, il n'est pas recommandé d'utiliser l'appareil à une distance inférieure à celle-ci.

10.2.3 FCC/IC LABELS

The radio module in this product is labeled with its own FCC ID and IC numbers. The FCC ID and IC numbers are not visible when the radio module is installed inside another device. Therefore, the outside of the device into which the module is installed must also display a label referring to the enclosed radio module. The final end device must be labeled in a visible area with the following:

“Contains FCC ID: ONFC1602A”

“Contains IC: 4807A-C1602A”

The FCC and IC numbers are found on the product label.

10.2.4 RADIO MODULE

The products described in these instructions contain the radio modules:

PRODUCT	RADIO MODULE
T28	D00005-15

ANNEX A: INDEX

A

Antenna	14
---------------	----

B

Battery	39
Charge	40
Battery pack	39
Battery precautions	37
Handling	37
Storage	37

C

Cable control	40
CE marking	42
Chargers	39
Charging temperature	15, 39
Clear blocked inputs	36
Configuration menu	30
Enter Menu mode, no PIN code	31
Enter Menu mode, PIN code	32
Current consumption	14

D

D4-01	39
D4-02	39
D4-06	39
Data format	14
Dimensions	16
Display LEDs	20

Display specifications	15
Disposal	38
E	
EIRP	14
F	
FCC statement	43
FCC/IC labels	44
Frequency management	14
Functionality test	25
I	
IC Statement	43
IP code	15
L	
Log in	26
Log out	29
M	
M245060	39
M769755	39
M769780	39
Maintenance	41
Menu mode	30
Enter Menu mode, no PIN code	31
Enter Menu mode, PIN code	32
Menu protection	31
Menu navigation	23
Message types	20

N

Number of channels 14

O

Operating temperature 15

P

PIN code 31

Power supply 14

R

Radio frequency band 14

Radio frequency output power 14

Radio module 44

Range 14

Register 33

S

Safety Features 13

Safety standards 15

Side buttons 21

Specifications

 Other specifications 15

 System 14

 Transmitter 14

Start-up protection 24

Start session 27

Status and error code messages 22


Stop button 13

Storage temperature 15

 Battery 39

Switch off	29
System address	14
T	
Transmitter display	20
W	
Warnings & restrictions	10
Maintenance	11
Operation	10
WEEE directive	42

This page intentionally left blank.

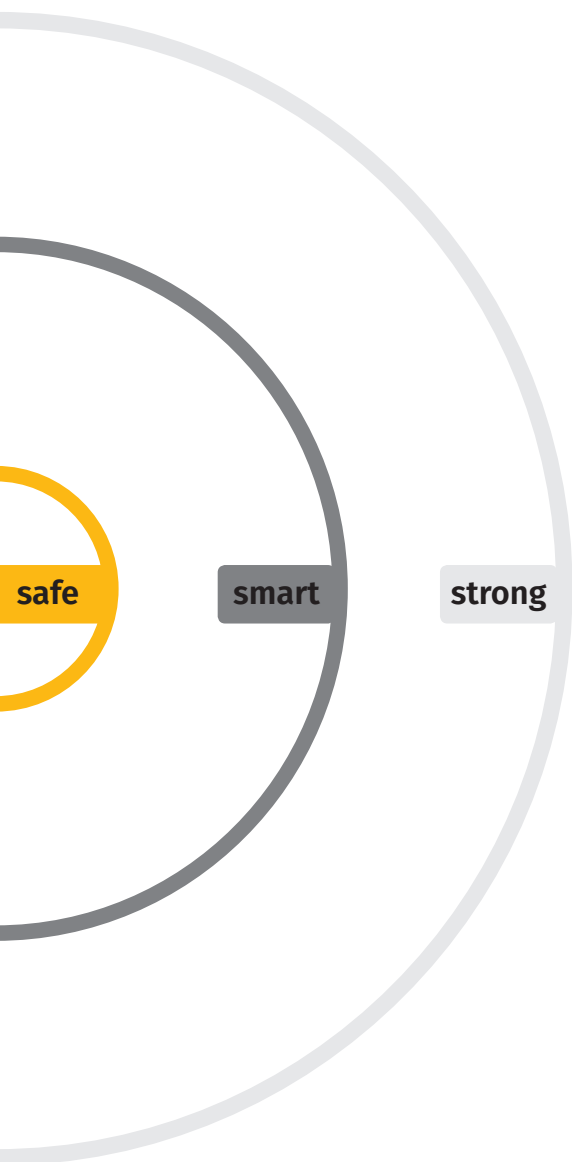

 **tele radio**[®]
wireless solutions

These End user instructions are subject to change without prior notice.
Download the latest instructions from www.tele-radio.com.